

Doxy Die Cast 3R & Die Cast R Instructions

Introduction

Congratulations on your purchase of the Doxy Die Cast 3R or Die Cast R, the ultimate wand massagers designed to deliver deep, rumble vibrations that provide unparalleled pleasure and relaxation. Made from solid cast aluminium with a luxurious finish, these wands offer the power and quality that Doxy is known for. This guide will help you get the most out of your new Doxy product.

What's in the Box

- Doxy Die Cast 3R / Doxy Die Cast R Wand Massager
- Pin-to-USB Charging Cable
- Warranty Card & Instruction Manual QR Links

Key Features

- Deep, Rumbly Vibrations: Both models offer intense vibrations that penetrate deeply for effective muscle relaxation and heightened pleasure.
- Variable Speed & Pulse Settings: Customise your experience with multiple speeds and pulse modes, easily controlled with the intuitive LED buttons.
- Solid Aluminium Body: Crafted from durable, hand-finished aluminium, ensuring long-lasting quality and a luxurious feel.
- Screw-on Silicone Head (3R only): The head of the Die Cast 3R is removable for easy cleaning and compatibility with screw-on attachments (sold separately).
- Travel Lock Function: Secure your device for travel by activating the travel lock mode.
- Rechargeable Battery (Die Cast 3R & Die Cast R): Enjoy up to 60 minutes of full-power use with a 4-hour charge time.

Charging Instructions

Initial Charge:

- Insert the pin end into the base of your wand and connect the USB end into the power adapter.
- Plug the adapter into a power outlet. The LED buttons will light up orange, indicating that the device is charging.
- It is recommended to fully charge your wand before the first use. Charging typically takes about 4 hours.

Charging While in Use:

- Important: The Die Cast 3R & Die Cast R will not operate while charging. If the wand turns on while plugged in, this indicates a fault. Contact customer support for further assistance.

Charging Status:

- The LED buttons will remain red while charging and gradually turn orange. Once fully charged, the lights will turn off, indicating that the wand is ready for use.

Operating Instructions

Turning On/Off:

- To turn on the wand, press the power button once. The LED buttons will light up blue, and the wand will begin vibrating at its lowest setting.
- To turn off the wand, press the power button again.

Adjusting Speed & Pulse Settings:

- Use the “+” button to increase the vibration intensity. Continue pressing to cycle through the available speed settings.
- Use the “-” button to decrease the vibration intensity.
- To activate the pulse mode, press and hold the power button for 3-5 seconds. The wand will start pulsing. Use the “+” and “-” buttons to adjust the pulse intensity.
- To return to steady vibration mode, press and hold the power button again.

Travel Lock:

- To activate the travel lock, press and hold the power button and the “-” button simultaneously for 3-5 seconds. The LED buttons will red, indicating that the wand is locked.
- To deactivate the travel lock, press and hold the power button and the “-” button again for 3-5 seconds. The LED buttons will flash green, indicating that the wand is unlocked and ready for use.

Cleaning and Maintenance

Cleaning the Wand:

- Ensure the wand is unplugged and turned off before cleaning.
- Wipe the body of the wand with a damp cloth. Use a mild soap or a toy cleaner to clean the silicone head (avoid getting water into the charging port).
- Important: The wand is not waterproof, so do not submerge it in water or allow water to enter the charging port.

Removable Head:

- Die Cast 3R: The silicone head of the Die Cast 3R can be unscrewed for easy cleaning. After cleaning, ensure it is completely dry before reattaching.
- Die Cast R: The silicone head of the Die Cast R can be removed for cleaning or replacement. To remove, hold the wand firmly with one hand, and with the other, gently pull the silicone head away from the base, using a slight massage or jiggle motion to free it from the cast metal core. To reattach, simply reverse the motion, ensuring the flanged edges securely cover the base to prevent it from shifting during use. This flanged seal also acts as a liquid barrier - essential for those intense, explosive orgasms Doxy is known for!
- After cleaning, always make sure the head is completely dry before reattaching.

Storage:

- Store your Doxy wand in a cool, dry place. Avoid exposing it to direct sunlight or extreme temperatures.
- Use the travel lock when storing the wand to prevent accidental activation especially when travelling!

Troubleshooting

Wand Not Charging:

- Ensure the charging cable is securely connected to both the wand and the power adapter.
- Make sure the power adapter is plugged into a working outlet.
- Check if the wand is in travel lock mode. If it is, deactivate the travel lock before charging.

Wand Not Turning On:

- Ensure the wand is fully charged.
- Check if the wand is in travel lock mode. If it is, deactivate the travel lock.
- If the wand still does not turn on, contact customer support.

Warranty & Support

Warranty Coverage:

- Your Doxy Die Cast 3R & Die Cast R come with a 2-year warranty when purchased directly from Doxy or a registered retailer.
- Register your product within 30 days of purchase to activate the warranty.

Customer Support:

- If you encounter any issues with your Doxy product, please contact our customer service team via the website.

Colour Code System

Green Flashing = Travel Lock Unlocked

Red Flashing = Travel Lock Enabled

Blue = 100% charged and powered on

Orange = Battery level low and / or charging when plugged in

Red = Battery level low